


# Module Nos.106/248/280


Model: A-250, W-100, W-52, W-23, A-254, W-35, W-450, DW-1000, etc.

## [Reading the display]


[Regular timekeeping mode]

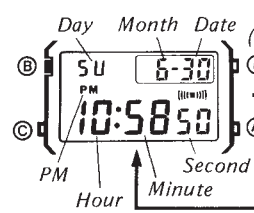


[Stopwatch mode]

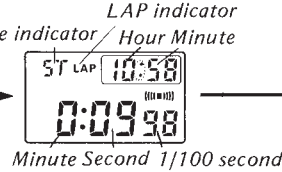

[Countdown alarm mode]

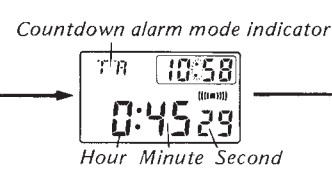


[Daily alarm mode]

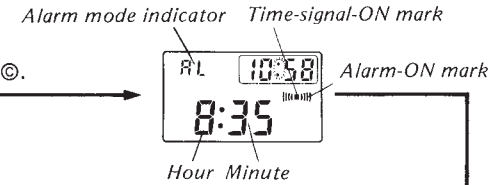

[Changeover between 12/24 hour formats] In regular timekeeping mode, with every push of A, the display is switched between 12/24 hour formats.

[Stopwatch operation] A signal confirms start/stop operation. A signal sounds at 10-minute intervals.

(Working range) The stopwatch display is limited to 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

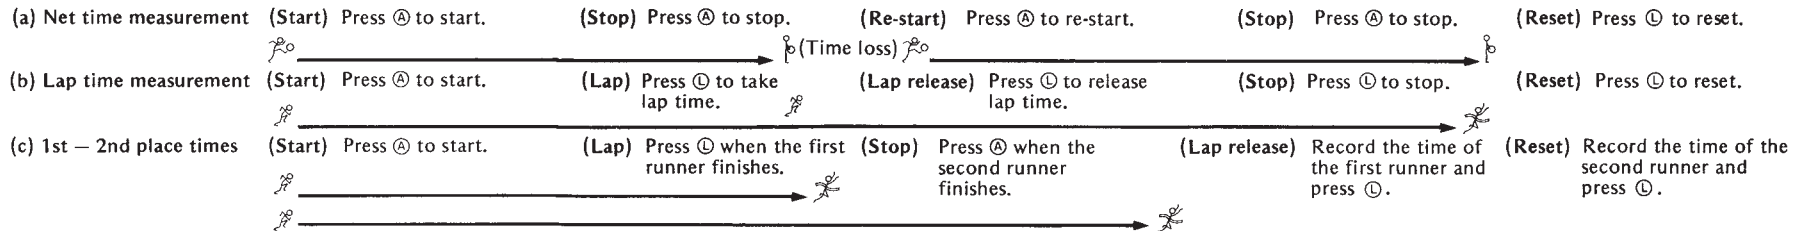


## [Countdown alarm operation]

The countdown can be set from one minute to 11 hours 59 minutes, and times to an accuracy of one second. Start/stop operation is possible by pressing the A button and is confirmed by a signal. A signal sounds at 10-minute intervals. When the display reaches zero, the buzzer will sound for 30 seconds unless the L button is pressed.

(Repeat function) When the display is stopped, the pre-entered time is retrieved by pressing the L button.

[Countdown alarm display]

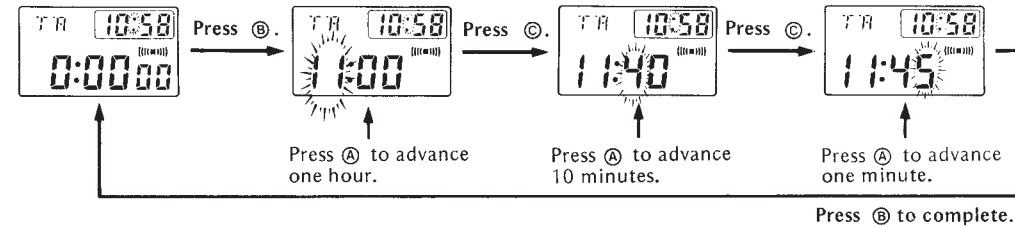


## [Setting daily alarm time]

Every time the L button is pressed in the alarm time display, the alarm-ON-mark (■) appears or disappears. When the alarm-ON-mark is lit, the buzzer sounds for 30 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press the L button.

(Setting the time signal) Every time the A button is pressed in the alarm time display, the time-signal-ON-mark (■) appears or disappears. When the time-signal-ON-mark is lit, the watch sounds every half hour on the half hour with a "Bip" signal, and sounds every hour on the hour with a "Be-e-op" signal, regardless of the preset alarm time.

(Sound demonstration) While both A and L buttons are pressed simultaneously, the buzzer sounds.

[Alarm time display]

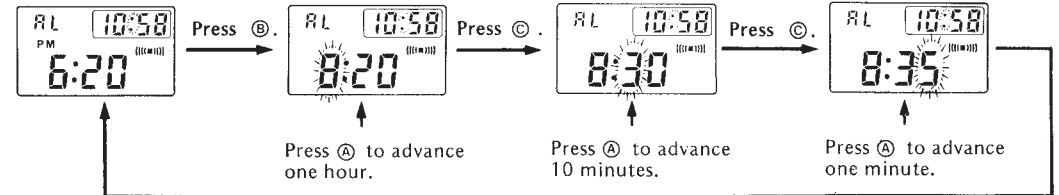


## [Setting time and calendar]


[Time display]



[Second adjusting]

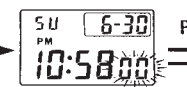

[Hour setting]

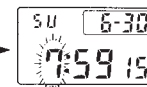

[10-minute setting]



[1-minute setting]



[Month setting]



[Date setting]



[Day setting]



Press L to revert to normal time.

Press L to revert to normal time.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the L button repeatedly.

(Reversion to normal time display) The watch reverts to the normal time display if the L button is pressed, regardless of the digit setting mode.