



## [Reading the display]

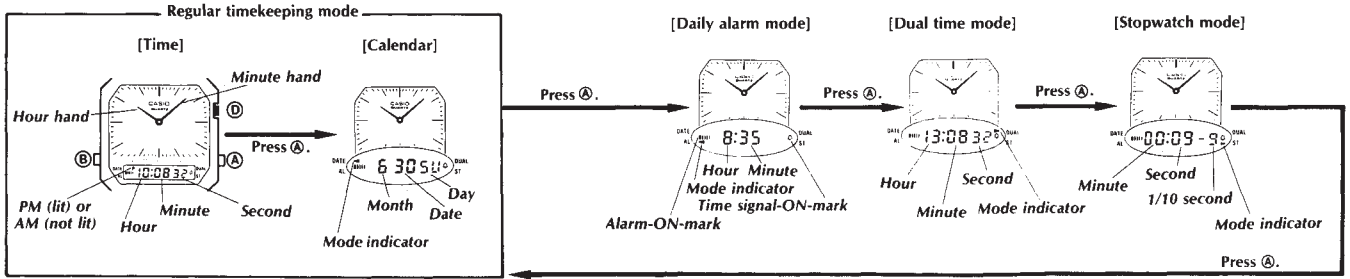

SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday FR: Friday SA: Saturday

(Sound demonstration) Press and hold the ⓐ button to sound the buzzer.

## [Setting digital time]

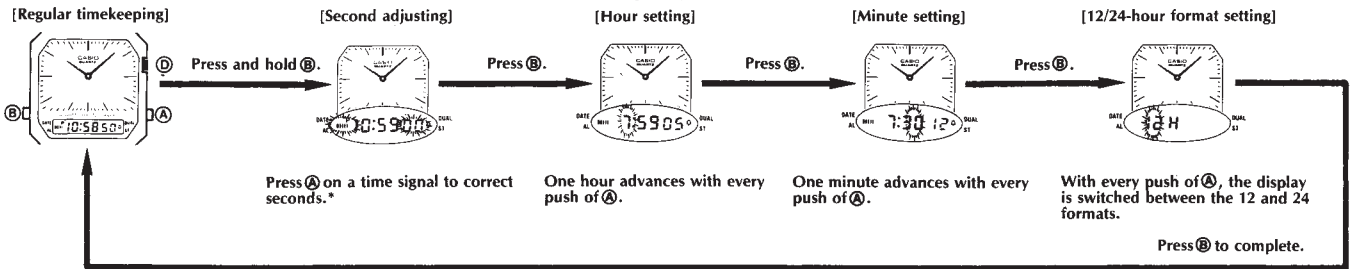


\*Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.

(Quick digit advance) When the ⓐ button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.


(Auto-retrieve function) When setting the watch, if you leave it alone for 1 to 2 minutes, the display will automatically return to the regular timekeeping mode.

## [Setting daily alarm]

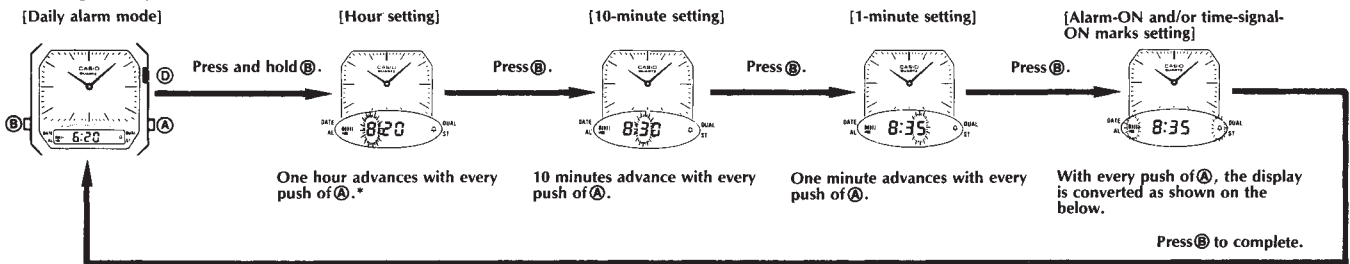


If the daily alarm is set the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press the ⓐ button. If the time signal is set, the watch sounds every hour on the hour.

\*When the watch is in the 24-hour system, the alarm time is displayed in the 24-hour system.

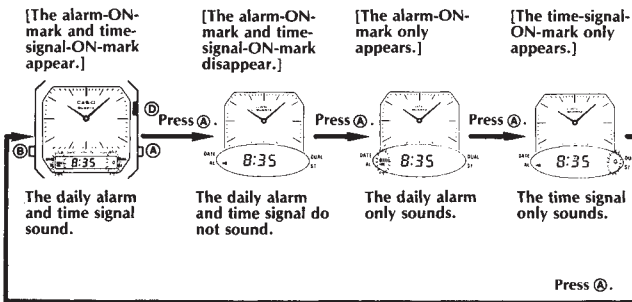

## [Stopwatch operation]

 


## [Setting analog time]

With every push of ⓐ, the minute hand advances by 1/3 of a minute. Keep ⓐ pressed for more than 2 seconds to advance quickly.

Minute hand is synchronized with 0, 20 and 40 seconds of digital timekeeping mode.

## [Presetting dual time (Time zone II)]

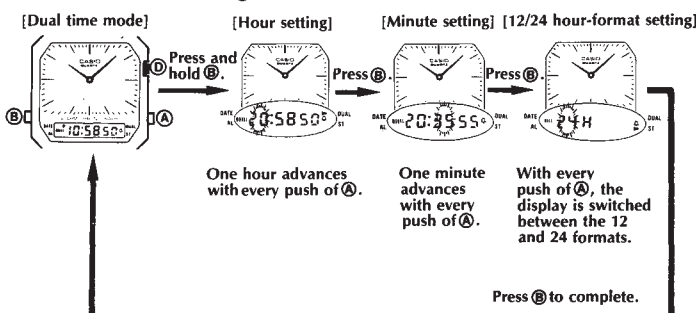

(Quick digit advance) When the ⓐ button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

## [Setting calendar]

