



## [Reading the display]

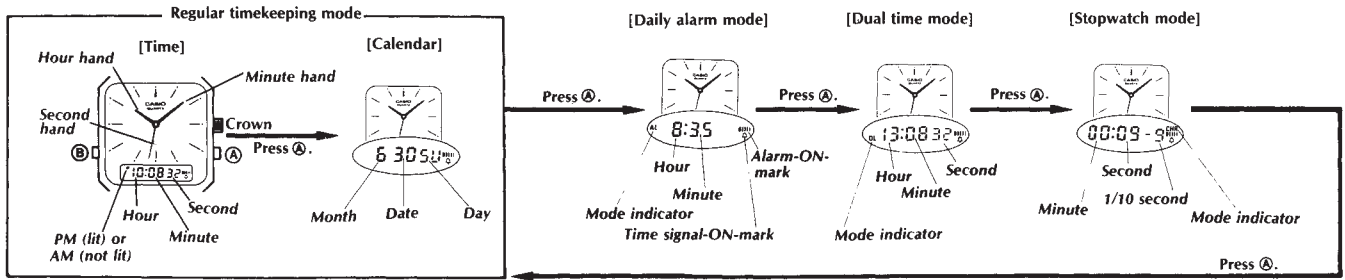

SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday FR: Friday SA: Saturday

(Sound demonstration) Press and hold the A button to sound the buzzer.


## [Setting digital time]

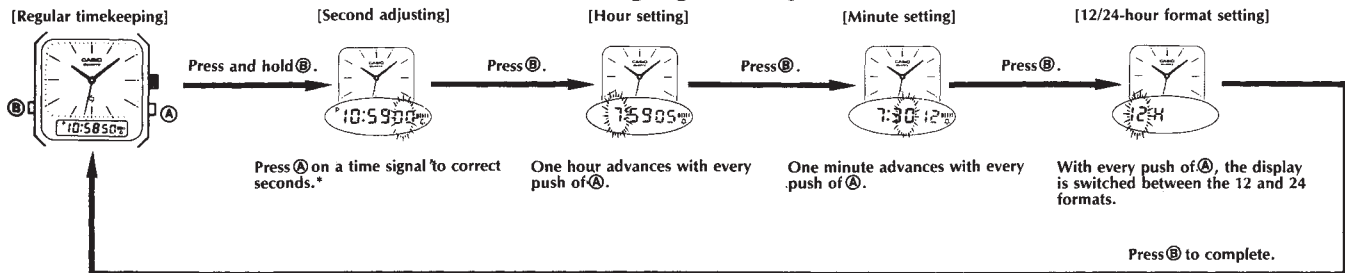

\*Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.


(Quick digit advance) When the A button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.  
 (Auto-retrieve function) When setting the watch, if you leave it alone for 1 to 2 minutes, the display will automatically return to the regular timekeeping mode.

## [Setting daily alarm]

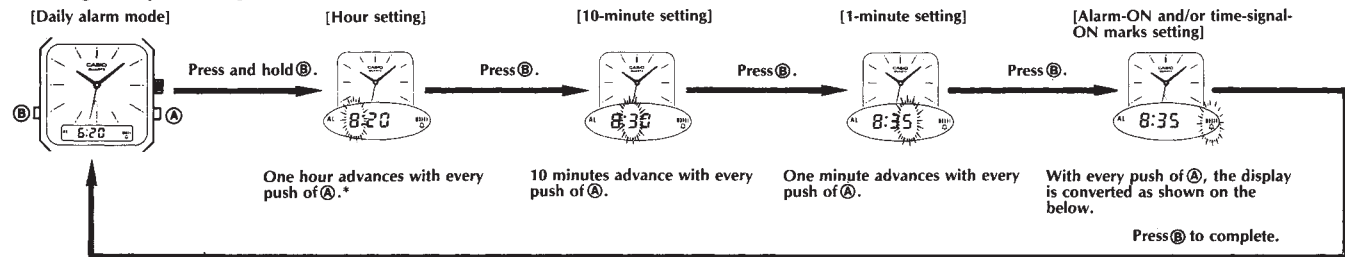


\*When the watch is in the 24-hour system, the alarm time is displayed in the 24-hour system.

If the daily alarm is set the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press the B button. If the time signal is set, the watch sounds every hour on the hour.

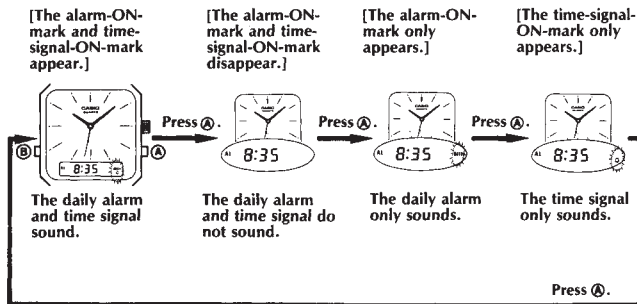


## [Stopwatch operation]

 


## [Setting analog time]

- 1) Pull the crown out when the second hand at 12 o'clock position and the second hand stops.
- 2) Set the hands by turning the crown.
- 3) In accordance with a time signal, push the crown in.

## [Presetting dual time (Time zone II)]

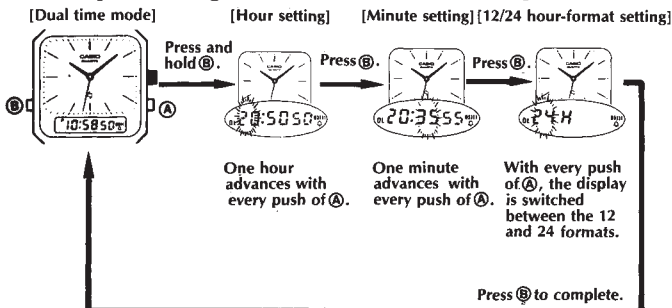

## [Setting calendar]

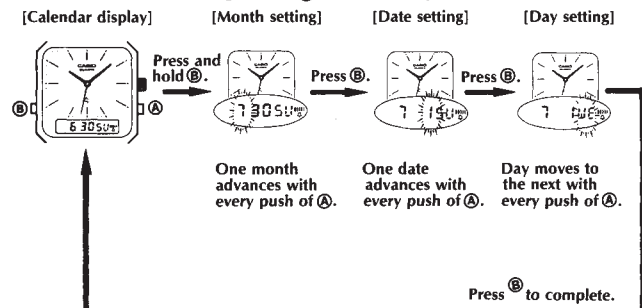

(Quick digit advance) When the A button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.