



CASIO 808 809 827
Module No. 917 927

10B+3AN(Ver.A)

DI

User's Guide
 Guia del propietario
 使用方法
 شهادة صمان

Warranty Certificate
 Certificado de garantia
 保證書
 دليل الاستخدام

READING THE DISPLAY

Regular timekeeping
 Time signal ON mark
 Minute hand
 Hour hand
 Second

Calendar
 Minute hand
 Hour hand
 Second
 Month
 Date
 Year
 Day

[Module No. 808] [Module No. 809]
 [Module No. 917] [Module No. 927]

(Reversion to regular time) The watch reverts to regular timekeeping when the **C** button is pressed after operation.

[5 daily alarms] [Dual time] [Countdown alarm] [Stopwatch]

ON/OFF indicator
 Alarm No.
 Minute
 Hour
 Mode indicator

Minute
 Hour
 Second
 Mode indicator

Minute
 Hour
 Second
 Mode indicator

Minute
 Hour
 Second
 Mode indicator

Press **C**.

SETTING TIME AND CALENDAR

1) Press **B** in regular timekeeping mode.
 2) Press **A** on a time signal to correct seconds.
 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.

SECOND → HOUR → MINUTE → YEAR
 DATE → MONTH

4) Each press of **A** or **C** corrects digits one by one. Keep pressed for quick correction.
 * Display automatically returns to initial regular timekeeping mode if left unused for a few minutes.
 5) Press **B** to complete setting.

FIVE DAILY ALARMS

ON/OFF indicator

Alarm No. 1 Alarm No. 2 Alarm No. 3 Alarm No. 4 Alarm No. 5 Hourly Signals

1) Press **B** in the alarm mode to select an Alarm No.
 2) Press **A** on a time signal to correct seconds.
 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.
 * Display automatically returns to initial alarm mode if left unused for a few minutes.
 5) Press **B** to complete setting.

(Alarm-ON/OFF setting)
 In each alarm mode, every **C** button is pressed, the alarm will be ON or OFF. When the time signal is ON, the watch chimes every hour on the hour.

(Presetting alarm times)
 1) Press **A** in the alarm mode to select an Alarm No.
 2) Press **B** to set new alarm time.
 3) Each press of **A** or **C** corrects flashing digits one by one. Keep pressed for quick correction.
 4) Press **C** to shift flashing position. The digit(s) to be changed will flash.
 * Display automatically returns to initial alarm mode if left unused for a few minutes.
 5) Press **B** to complete setting.

(Sound demonstration) Press and hold **A** in each alarm mode to sound the buzzer.

SETTING DUAL TIME

1) Press **B** in the dual time mode
 2) Each press of **A** or **C** corrects flashing digits one by one. Keep pressed for quick correction.
 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.
 * Display automatically returns to initial dual time mode if left unused for a few minutes.
 4) Press **B** to complete setting. * The **B** button changes 12-24-hour formats.

STOPWATCH OPERATION

A signal confirms start/stop operation.
 (Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds, for longer times reset and started again.

(a) Net time measurement
 (Start) → (Time loss) → (Stop) → (Reset)

(b) Split time measurement
 (Start) → (Split) → (Split release) → (Stop) → (Reset)

(c) Split time and 1st-2nd place times
 (Start) → (Split) → (Stop) → (Split release) → (Reset)

The first runner finishes.
 The second runner finishes. Record the time of the first runner.

COUNTDOWN ALARM OPERATION

The countdown can be set from one minute to 24 hours (Display shows 0:00), and times to an accuracy of 1/10th of a second.
 Start/stop operation is possible by pressing the **B** button and is confirmed by a signal. When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed.

(Repeat function) When the display reaches zero, the pre-entered time is retrieved automatically.
 (Pre-entering countdown alarm time)
 1) Press **B** to set new countdown alarm time.
 2) Each press of **A** or **C** corrects flashing digits one by one. Keep pressed for quick correction.
 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.
 * Display automatically returns to initial countdown alarm mode if left unused for a few minutes.
 4) Press **B** to complete setting.

CARE OF YOUR WATCH

- Battery life is calculated from when the battery is loaded at the factory. At first sign of power fade (no light or dim display), have battery replaced at dealer or Casio distributor.
- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- Watches are ranked I through V according to the water resistance chart below. Check the ranking of your watch to determine proper use.

Rank	Case Designation	Splashes, rain, etc.	Swimming, car-washing, etc.	Snorkeling, diving, etc.	Scuba diving
I*	—	No	No	No	No
II	WATER RESISTANT	Yes	No	No	No
III**	50M WATER RESISTANT	Yes	Yes	No	No
IV***	100M WATER RESISTANT	Yes	Yes	Yes	No

* This watch is not water-resistant, so be careful not to get it wet.
 ** Caution—50 metres water resistant models—do not operate push buttons below the surface of the water.
 *** Underwater button operations possible (except for countersunk buttons).
 Should the watch be exposed to sea water, wash it well with fresh water and wipe dry.

- A waterproof rubber seal is used to guard against water and dust. As rubber deteriorates with time, the seal should be replaced periodically (every 2—3 years).
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid exposing the watch to temperature extremes.
- Although the watch is designed to withstand impact under normal use, it is inadvisable to subject it to severe impact, rough usage or drops onto hard surfaces.
- Avoid fastening the band too tightly. You should be able to insert your finger inside the band.
- Clean the watch and bracelet with a soft cloth, dry or moistened with mild soap. Never use volatile chemicals (such as benzine, thinners, spray cleaners, etc.).
- Gold plated surfaces can be kept in good condition by regular wiping with a soft damp cloth. Discoloration can be removed with detergent.
 Always store your watch in a dry place.
- Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray, adhesive agent, paints, etc. The chemical action caused by such liquids will destroy the seals, case and finish.
- Be careful not to rub off the silk screen process printing on the watch band. (Some models only)

SPECIFICATIONS

Accuracy at normal temperature: ± 15 seconds a month
 Display capacity:
 • Regular timekeeping mode
 Analog: Hour, minute, second
 Digital: (Time) Hour, minute, second, am/pm, month, date
 (Calendar) Year, month, date, day
 Time system: Changeover between 12-hour or 24-hour formats
 Calendar system: Auto-calendar pre-programmed to the year 2019

- Daily alarm mode
 5 daily alarms can be set independently.
- Hourly time signal function
- Dual time mode
- Countdown alarm mode
 Input range: From 1 minute to 24 hours
 Measuring unit: 1/10th of a second
 Measuring modes: Normal time and net time
- Stopwatch mode
 Measuring capacity: 23 hours 59 minutes 59.99 seconds
 Measuring unit: 1/100th of a second
 Measuring modes: Normal time, net time, split time and 1st-2nd place times

Battery:	Module No.	Battery type	Battery life
	808/809	CR-1616	Approx. 2 years
	827/917/927	CR-2016	Approx. 3 years

*Assuming 20 seconds of alarm operation per day.

NOTE: THERE IS NO WAY unit components can be damaged or malfunction, due to misoperation of buttons. If confusing information appears on the display it means entry sequence was incorrect. Please read the manual and try again.